# Customizable features


Your vehicle includes a variety of electronic features that can be personalized to your preferences. These preferences can be changed by using the "DISP" button, by using the Remote Touch, or at your Lexus dealer.

## Customizing vehicle features

### ■ Changing by using the Remote Touch

- Vehicles without a navigation system
- 1 "Vehicle Settings" screen displayed on the Remote Touch screen. (→P. 366)
- 2 Select "Vehicle Customization" on the "Vehicle Settings" screen.

"Vehicle Customization" screen will appear.

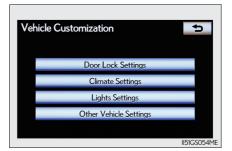

- 3 Choose a category displayed on the screen to display the settings.
- A Select the setting to be changed. Change each setting.

  For items that can be enabled/disabled, and for items with an operating time that can be changed, select "On" or "Off", or select the desired operating time.

  For items with sensor sensitivity that can be changed, select "+" or "-" to choose the desired level, then select "OK".
- 5 A message indicating that the settings are being saved will appear. Do not perform any other operations while this message is displayed.

- ▶ Vehicles with a navigation system
- $\rightarrow$ Refer to "Navigation System Owner's Manual".
- Changing by using the "DISP" button
  - →P.109

## Customizable features

Some function settings are changed simultaneously with other functions being customized. Contact your Lexus dealer for further details.

- (1) Settings that can be changed using the Remote Touch
- ② Settings that can be changed using the "DISP" button
- 3 Settings that can be changed by your Lexus dealer Definition of symbols: O = Available, = Not available

Item	Function	Default setting	Custom- ized setting	1	2	3
	Language	American	French		0	0
	Language	English	Spanish			
	42	miles	km (km/L)			
	Units*2	(MPG)	km (L/100km)	_	0	Ο
		ON (Self-light- ing)	OFF			
	ECO lamp		ON (Always)	_	0	Ο
Multi-infor- mation display	Drive monitor	Cruising range	Fuel consump- tion	_	0	0
(→P.105)	Tachometer settings	Tachometer (Self-	HV Meter (Always)		0	0
	achometer settings	changing)	Tachometer (Always)			
	Lamp brightness	Standard	Bright	_	0	0
	SPORT lamp	ON	OFF	_	0	0
	EV Indicator	ON	OFF	-	0	0
	Background screen	ON	OFF	_	0	0
	Default settings	OFF	ON	_	0	0

2

Custom-

ized setting

Default

setting

Driver's

**Function** 

Vehicle specifications

buzzer

Item

ltem	Function	Default setting	Custom- ized setting	1	2	3
	Smart access system with push-button start	On	Off	0	_	0
Smart access			All the doors			
system with push-button	Smart door unlocking	Driver's	Each door	0	_	0
start (→P. 127)			Same side doors			
	Welcome light illumination control	On	Off	_	-	0
	Wireless remote control	On	Off	_	_	0
Wireless remote control (→P.142)	Unlocking operation	Driver's door unlocked in one step, all doors unlocked in two steps	All doors unlocked in one step	0	_	0
,		One long	One long One short press			
	Trunk unlocking operation	press	Push twice	_	-	0
			Off			
	Driver's seat movement	Standard	Off	0		0
	when exiting the vehicle	Standard	Partial			
Front seats (→P.157)	Driver's seat lumbar sup- port movement when exit- ing the vehicle	On	Off	0	_	0
	Front passenger's seat lumbar support firmness adjustment when exiting the vehicle	On	Off	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
Front seats (→P.157)	Upward movement of entire front passenger seat during stowage when the seat is stowed by using the front passenger seat operation AUTO switch on front console or the front passenger seat operation AUTO button on the rear armrest*1	On	Off	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
Power windows (→P.194) and moon roof	One-touch close opera- tion using the power win- dow switches on the front passenger door and each rear door	On	Off	_	_	0
	One-touch front passen- ger window or rear win- dow close operation using the power window switch on the driver's door	On	Off	_	-	0
(→P. 197)	Mechanical key linked operation	On	Off	_	-	0
	Wireless remote control linked operation	Off	On (Open only)	_	_	0
	Linked entry function	On	Off	-	-	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
			5			
Turn signal lever	Times of flashing of the lane change signal flashers	3	7	0	-	0
(→P. 231)	-		9			
			11			
			Off			
	Light sensor sensitivity	Standard	-2 to 2	Ο	-	Ο
Automatic			Off			
light control system (→P. 238)	Time elapsed before head- lights automatically turn off	30 seconds	60 seconds	0	_	0
( 71.230)	after doors are closed		90 seconds			
AFS (Adaptive Frontlighting System) (→P. 239)	Adaptive Front-lighting System	On	Off	_	_	0
Lights (→P. 238)	Daytime running light system*3	On	Off	0	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
	Detection distance of the front center sensor	Far	Near	0	1	0
Intuitive	Detection distance of the front side sensor	Far	Near	0	1	0
parking assist (→P. 287)	Detection distance of the rear center sensor	Far	Near	0	ı	0
	Buzzer volume	3	1 to 5	Ο	-	0
	Display setting (when intuitive parking assist is operating)	All sensors displayed	Display off	0	ı	0
Automatic air condi- tioning sys- tem (→P. 402)	A/C Auto switch operation	On	Off	0	1	0
	Exhaust gas sensor sensitivity	Standard	-3 to 3	0	1	0
	Air conditioning control of Eco drive mode	On	Off	_	-	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
	Front climate control seat temperature adjustment during automatic operation (individual seat adjustment available)	Level 3 (standard)	Level 1 (cool) to level 5 (warm)	0		0
Climate	Rear climate control seat start-up conditions when power switch is in the ON position (individual seat adjustment available)	Off	On (AUTO)	0	1	0
control seats (→P. 700)	Function that warms seats faster than usual when heater is at maximum set- ting (individual seat adjust- ment available)	On	Off	_		0
	Time until function that		Short			
	warms seats faster than usual when heater is at maximum setting turns off (individual seat adjustment available)	Standard	Long	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
Heated steering wheel (→P. 698)	Automatic steering wheel heating	On	Off	0	-	0
	Time until automatic steer- ing wheel heating turns off	Level 3 (standard)	Level 1 (short) to level 5 (long)	0	-	0
	Time elapsed before the interior lights turn off		Off			
		15 seconds	7.5 seconds	0	1	0
Illumination $(\rightarrow P. 671)$			30 seconds			
	Operation after the power switch is turned off	On	Off	_	1	0
	Operation when the doors are unlocked	On	Off	_	_	0

ltem	Function	Default setting	Custom- ized setting	1	2	3
	Operation when you approach the vehicle with the electronic key on your person	On	Off	_	_	0
	Footwell and inside door handle lights	On	Off	_	_	0
	Shift lever light	On	Off	_	-	0
	Seat belt buckle illumina- tion when driver's door is opened	On	Off	_	_	0
Illumination (→P. 671)	Seat belt buckle illumina- tion after the power switch is turned off	On	Off	_	_	0
	Instrument panel illumina-	Choreo- graphed	Simple illu- mination	_	_	0
	tion method	illumination	Off	_	_	0
	Exterior light control	On	Off	_	_	0
			Off			
	Time elapsed before the outer foot lights turn off	15 seconds	7.5 15 seconds seconds	0	_	0
	J		30 seconds			

ltem	Function	Default setting	Custom- ized setting	1	2	3
Illumination (→P. 671)	Operation of the outer foot lights when you approach the vehicle with the elec- tronic key on your person	On	Off	_	1	0
	Operation of the outer foot lights when the doors are unlocked with the power door lock switch	On	Off	_	-	0
Seat belt reminder (→P. 808)	Vehicle speed linked seat belt reminder buzzer	On	Off	_	_	0

<sup>\*1:</sup> If equipped

#### ■ Vehicle customization

- When the speed-detecting automatic door lock and shift-linked automatic door lock are both on, the door lock operates as follows.
  - When shifting the shift lever to any position other than P, all the doors will be locked.
  - If the vehicle is started with all doors locked, the speed- detecting automatic door lock will not operate.
  - If the vehicle is started with any door unlocked, the speed- detecting automatic door lock will operate.
- When the smart access system with push-button start is off, the entry unlock function cannot be customized.
- When the doors remain closed after unlocking the doors and the timer activated automatic door lock function activates, signals will be generated in accordance with the operation buzzer volume and operational signal (Emergency flashers) function settings.

### ■ When customizing using the Remote Touch

Stop the vehicle in a safe place, apply the parking brake, and shift the shift lever to P. Also, to prevent 12-volt battery discharge, leave the hybrid system operating while customizing the features.

<sup>\*2:</sup> The default setting varies according to countries.

<sup>\*3:</sup> U.S.A. only

## **A** CAUTION

### ■ During customization

As the hybrid system needs to be operating during customization, ensure that the vehicle is parked in a place with adequate ventilation. In a closed area such as a garage, exhaust gases including harmful carbon monoxide (CO) may collect and enter the vehicle. This may lead to death or a serious health hazard.

## ♠ NOTICE

### ■ During customization

To prevent 12-volt battery discharge, ensure that the hybrid system is operating while customizing features.